



1. Press **0.** 


2. Press C.

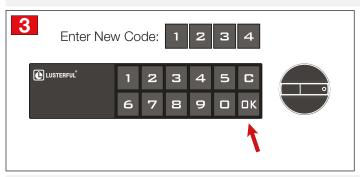

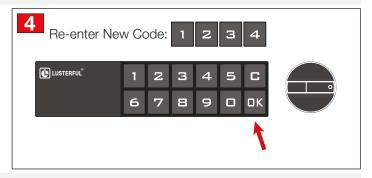

3. Type in a new code e.g. **1234** then press **OK**, the code can be set by selecting a 1-15 digit combination.


4. Re-enter your new code e.g. 1234 then press OK.

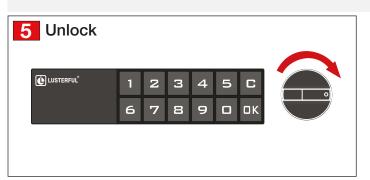




5. To unlock the door, type in your code and then turn the door release **clockwise.** 

6. When the door release is turned to the unlock position the door is **unlocked.** 

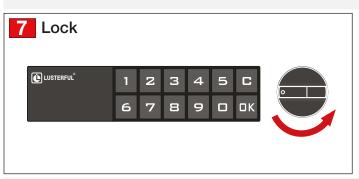

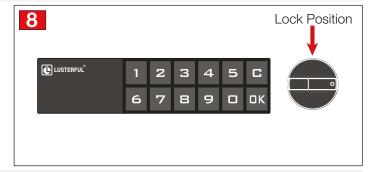

7. To lock the door, turn the door release anticlockwise.

8. When the door release is turned to the lock position the door is **locked.**